## Instructions

## FORMATREAD®

## **Cartridge Dispensing Instructions**



Unscrew cap and remove plug




Dispense a small amount until both sides flow evenly




Screw on Mix Nozzle. Dispense and discard first 2 inches of material.


## **Installation Instructions**

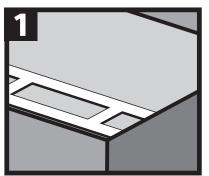


Apply EZ Form<sup>™</sup> to desired tread location. Remove connecting tabs to form a continuous tread.

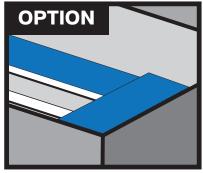


**Apply painter's tape** (to form a clean edge and for easier clean up)

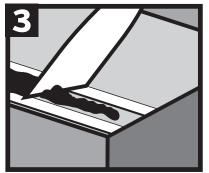


Spread Form-A-Tread to the level of the EZ Form

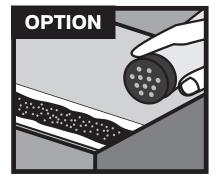

Sprinkle on Tread Grit<sup>®</sup> (HD, LD or WS) for customized texture [see Data Sheets]

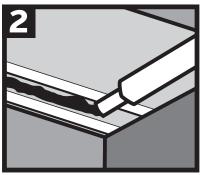

Follow cartridge dispensing instructions and apply Form-A-Tread

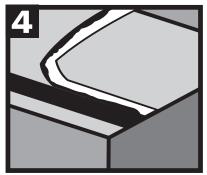

Remove EZ Form within 30 min

Form-A-Tread Company Division of RGF Materials Co. (LLC)

Division of RGF Materials Co. (LLC) 375 Morgan Street, Suite 1-B, Phoenixville, PA 19460 info@rgfmaterials.com