

Instructions



Cartridge Dispensing Instructions



Unscrew cap and remove plug




Dispense small amount until both sides dispense evenly




Attach mixing nozzle. Dispose first 2 inches of material.


Installation Instructions

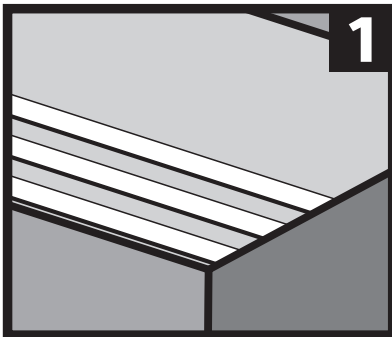


Apply Form Tape
(application to edge)

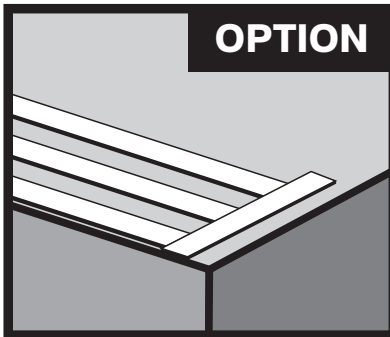


OPTION
Apply Form Tape to end
(to form clean edge)

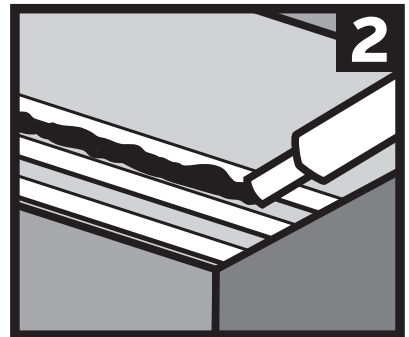

Apply epoxy between tape

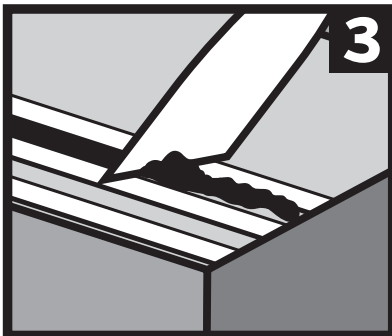

Spread epoxy to level of tape

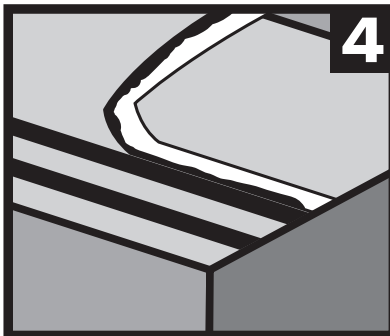

Remove tape within 2 hours

For Best Results

- Warm cartridge to a minimum of 75°F [24°C] before use.
- Clean and dry surface before application
- Use hi thrust [26:1] dispensing tool
- Remove Tape within 2 hours after applying epoxy
- Do not touch applied epoxy for 24 hours



RGF Materials Company
PO Box 941, Phoenixville, PA 19460
www.Form-A-Tread.com | 610-994-2138