

Instructions



Cartridge Dispensing Instructions



1 Unscrew cap and remove plug




2 Dispense a small amount until both sides flow evenly




3 Screw on Mix Nozzle. Dispense and discard first 2 inches of material.


Installation Instructions

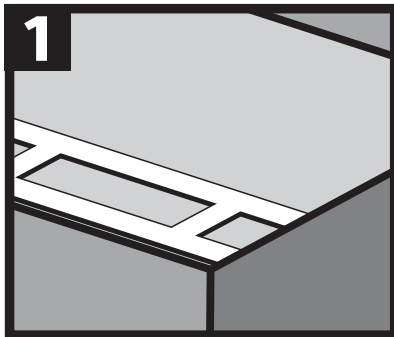


1 Apply EZ Form™ to desired tread location. Remove connecting tabs to form a continuous tread.

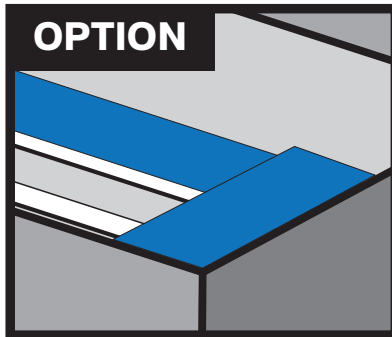


OPTION Apply painter's tape [to form a clean edge and for easier clean up]

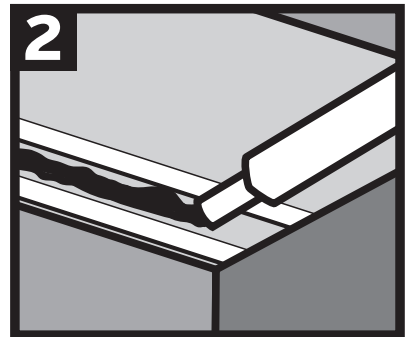


2 Follow cartridge dispensing instructions and apply Form-A-Tread

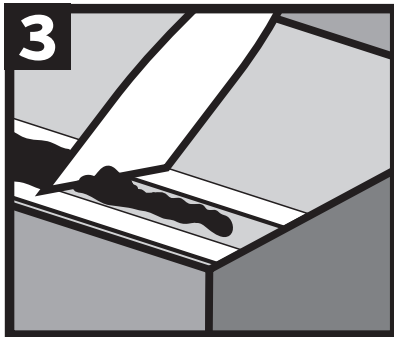

3 Spread Form-A-Tread to the level of the EZ Form

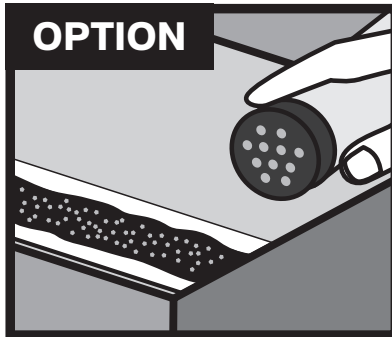

OPTION Sprinkle on Tread Grit® (HD, LD or WS) for customized texture [see Data Sheets]

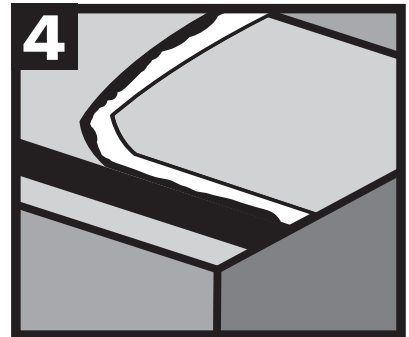

4 Remove EZ Form within 30 min

